

CONTENTS

preface

USING THIS GUIDE

Symbols.....	ix
Technician Notes.....	x
Serial Number	x
Locating Additional Information	x

chapter 1

PRODUCT DESCRIPTION

1.1 Computer Features and Models	1-1
Models	1-2
Features.....	1-4
1.2 Computer Components	1-5
System Memory Options	1-6
Mass Storage Devices.....	1-7
Power Equipment Options.....	1-9
1.3 Computer External Components	1-10
1.4 Design Overview.....	1-16
System Board.....	1-16

chapter 2

TROUBLESHOOTING

2.1 Preliminary Steps	2-2
2.2 Clearing Passwords	2-3
2.3 Power-On Self-Test (POST)	2-3
2.4 POST Error Messages	2-4
2.5 Compaq Utilities	2-6
Computer Setup	2-7
Computer Checkup (TEST).....	2-9
Running View System Information (INSPECT)	2-16
Running Compaq Diagnostics	2-17
Boot Sequencing	2-17
Factory Default Settings	2-17
2.6 Troubleshooting Without Diagnostics	2-19
Before Replacing Parts	2-19
Checklist for Solving Problems	2-19

chapter 3

ILLUSTRATED PARTS CATALOG

3.1 Serial Number Location	3-2
3.2 Computer System Major Components	3-3
3.3 Display Components	3-7
3.4 Miscellaneous Hardware Kit Components	3-8
3.5 Miscellaneous Plastics Kit Components	3-9
3.6 Power Equipment	3-10
3.7 Items that Ship with the Computer	3-11
3.8 Options	3-13
3.9 Mass Storage Devices	3-15
3.10 Miscellaneous	3-16
3.11 Documentation	3-16

chapter 4

REMOVAL AND REPLACEMENT PRELIMINARIES

4.1 Tools Required	4-1
4.2 Service Considerations	4-1
Plastic Parts	4-1
Cables and Connectors	4-2
4.3 Preventing Damage to Removable Drives	4-2
4.4 Preventing Electrostatic Damage	4-3
Packaging and Transporting Precautions	4-3
Workstation Precautions	4-4
Grounding Equipment and Methods	4-5
Electrostatic Voltage Levels and Protective Materials	4-6

chapter 5

REMOVAL AND REPLACEMENT PROCEDURES

5.1 Serial Number	5-1
5.2 Disassembly Reference Chart	5-2
5.3 Undocking the Computer	5-3
Undocking the Computer from the ArmadaStation	5-3
Undocking the Computer from the Armada MiniStation	5-4
5.4 Disconnecting the Computer	5-5
5.5 Computer Logo	5-6
5.6 Computer Feet	5-7

5.7	Preparing the Computer for Disassembly	5-8
5.8	Battery Packs.....	5-9
	Removing a Battery Pack	5-9
	Inserting a Battery Pack.....	5-10
5.9	Hard Drives	5-11
	Removing a Hard Drive	5-11
	Inserting a Hard Drive	5-12
5.10	MultiBay Devices	5-13
	Removing MultiBay Devices	5-13
	Inserting MultiBay Devices.....	5-14
5.11	PC Cards.....	5-15
	Removing a PC Card When the Computer is Off	5-15
	Removing a PC Card When the Computer is On	5-16
	Inserting a PC Card.....	5-16
5.12	Memory Expansion	5-17
	Removing the Memory Compartment Cover	5-17
	Removing a Memory Expansion Board	5-19
	Installing a Memory Expansion Board.....	5-20
5.13	Keyboard/CPU Cover Assembly	5-21
	Removing the Keyboard/CPU Cover Assembly	5-21
	Installing the Keyboard/CPU Cover Assembly.....	5-25
5.14	Auxiliary Battery.....	5-27
5.15	RTC Battery	5-29
5.16	Audio/Modem or Audio Only Board.....	5-31
5.17	Fan Assembly.....	5-32
5.18	Processor Board	5-33
5.19	Display Assembly	5-35
	Removing the Display Assembly	5-35
	Display Assembly Internal Components	5-38
	Bezel	5-38
	Panel	5-39
	Display Cable.....	5-41
	Inverter.....	5-42
	Microphone.....	5-43
5.20	System Board	5-44
	Installing the System Board.....	5-47

chapter 6

SPECIFICATIONS

6.1	Physical and Environmental	6-1
6.2	Display	6-3
6.3	Hard Drive.....	6-4
6.4	Diskette Drive	6-5
6.5	CD-ROM Drive.....	6-6

6.6 DVD-ROM Drive.....	6-7
6.7 LS-120 Drive.....	6-8
6.8 Battery Pack	6-9
6.9 System DMA.....	6-9
6.10 System Interrupts	6-10
6.11 System I/O Addresses	6-11
6.12 System Memory Map.....	6-13
6.13 Modem Chipset	6-13

Appendix A

CONNECTOR PIN ASSIGNMENTS.....	A-1
---------------------------------------	------------

Appendix B

POWER CORD SET REQUIREMENTS

3-Conductor Power Cord Set	B-1
General Requirements	B-1
Country-Specific Requirements	B-2
Notes	B-2

Appendix C

SCREW LISTING	C-1
----------------------------	------------

INDEX	I-1
--------------------	------------